
EDR 1 J1939 Installation Guide Set RPM/Engine Start/Stop

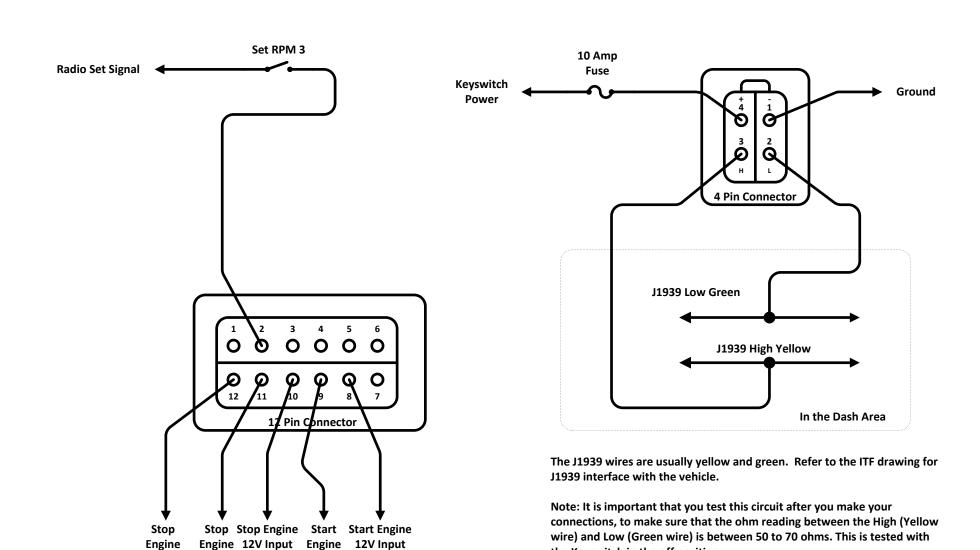

N/C

Com

Output

the Keyswitch in the off position.