## E.D.R. III Control Systems

**RPM Style:** Set **Remote RPM Switch Style:** 2 Position (on/off) **Remote Start Switch Style:** 2 Position (mom. on/off) **Remote Stop Switch Style:** 2 Position (mom. on/off)

- **Pin# 1** Tee into the ground side of the PTO light wire allowing the engagement of the PTO to activate the E.D.R. Control System.
- Pin# 2 Tee into the starter wire from the key switch
- Pin# 3 Refer to the ECM Guide Sheet.
- Pin# 4 Join to the remote start wire from the radio remote. (12 volt output)
- Pin# 5 Join to Set RPM wire from the radio remote. (12 volt output)
- **Pin# 6** Refer to the ECM Guide Sheet.
- Pin# 7 To ECM switched feed wire. (See Note)
- Pin# 8 To ECM switched feed wire. (See Note)
- Pin# 9 Join to the remote shutdown wire from the radio remote. (12 volt output)
- Pin# 10- 12 volt ignition fused. (15 amps)
- **Note:** The ECM switched feed wire has to be cut. The one wire will be joined to pin# 7 and the other wire will be joined to pin# 8.